


1. Fit holder (2) and fertiliser hose holder (11) to tyne using items 5, 6 & 7.
2. Fit bracket (12) to tyne above item 11 using items 8, 9 & 10. On flat tynes the bracket (12) rests against holder (11). With 'edge on' tynes there will likely be a gap between 11 & 12.
3. Cut the end of the fertiliser hose at 45 degrees (rear lugger) and fit through brackets (11 & 12) until end is between bracket bolts, secure to item 12 lug with hose clamp (not supplied).
4. Fit boot (13) to bracket (12) using items 14, 15, 16 & 17 after determining a suitable height (normally 50mm higher than knife for good Rhizo control). When using presswheels consider setting rear row of boots 10 to 15 mm lower to give even seed depth. Make sure the spring inside the boot (13) is resting on top of the closer plate insert.
5. Most seed hose will fit inside boot and can be pushed through to top of spring- inside boot. 38 mm OD poly pipe may be needed as a transition piece if seed hose is too large or too small.
6. Fit point (1) to holder (2), fit pin (3) through point and secure with split pin (4). Ensure one leg of split pin is sufficiently bent to retain.

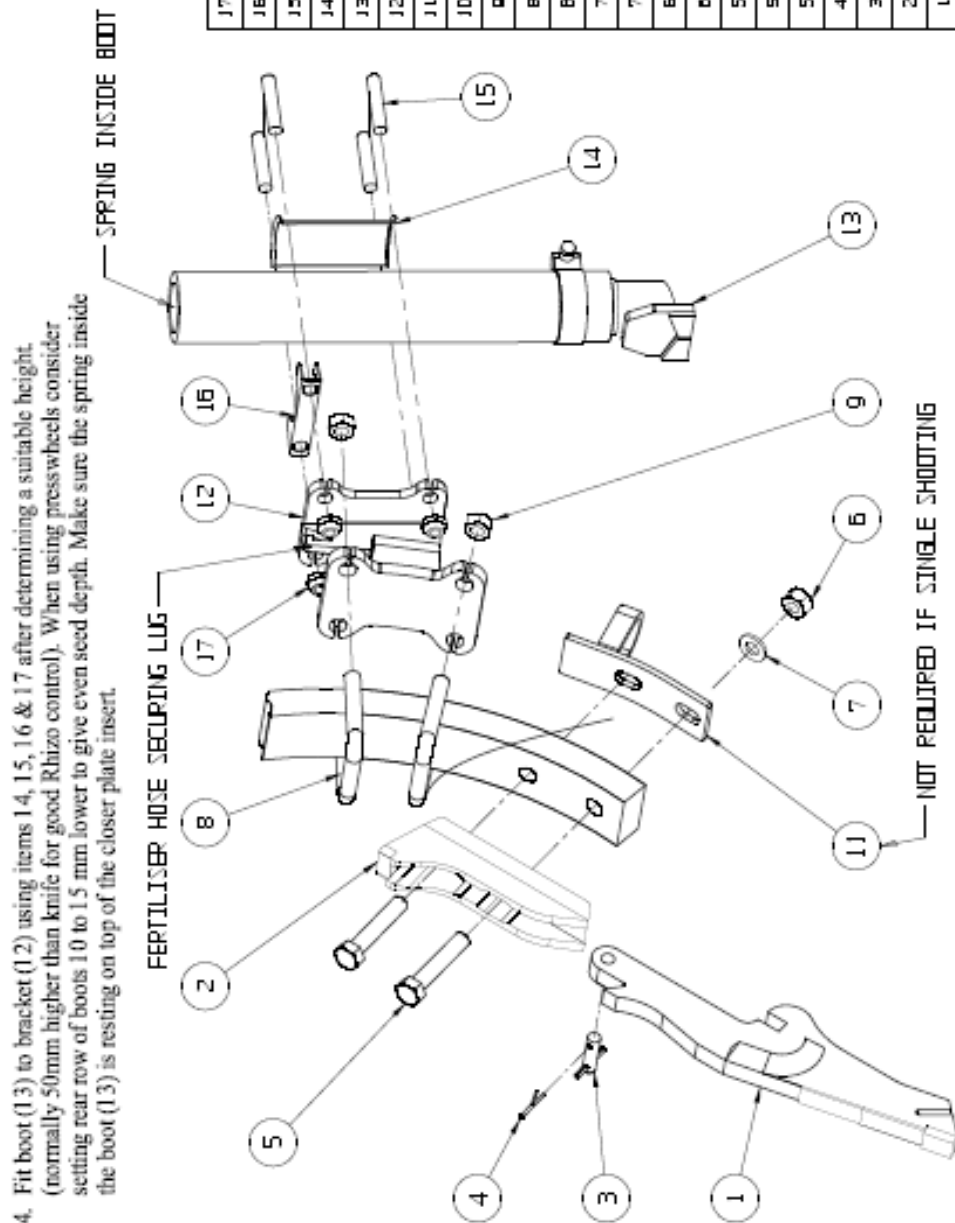

REF	QTY	PART No	UNIT SIZE	DESCRIPTION
17	4	H110NH		NALOC NUT M10
16	1	FB2820		CL-HP
15	2	UB2007		U BOLT
14	1	FB2810		S-BOLE
13	1			BOOT - TO SUIT APPLICATION
12	1			BRACKET - TO SUIT TYNE
11	1	FB2800		FERTILISER HOSE HOLDER
10				
9	2	H113NH		NALOC NUT M12
8	1	UB2002		U BOLT FOR UP TO 38 WIDE TYNES
6	1	UB2001		U BOLT FOR 50 WIDE TYNES
7	2	M113F		FLAT WASHER 1/2"
7	2	M1716F		FLAT WASHER 7/16"
6	2	H113EL		NUT 1/2" UNF
6	2	H1710L		NUT 7/16" UNF
5	2	B01212		BOLT 1/2" UNF X 2 1/2"
5	2	B01214		BOLT 1/2" UNF X 2 1/4"
5	2	B0716212		BOLT 7/16" UNF X 2 1/2"
4	1	PI435PL		SPLIT PIN
3	1	TP1180		PIN ASSY
2	1			HOLDER - TO SUIT TYNE
1	1			POINT - TO SUIT TYNE

ALL PARTS STRICTLY REFER TO
 PRODUCTION OF LEGS TO VIDEO
 FOR THE LATEST INFORMATION
 SUPPLYING PARTS

AGMASTER
 2067 HAPSHALL ST. COLLIE WA 6225

ASSY INSTRUCTIONS
 FLEXI BOOT & POINT

AI1030